


AST NONSKID SYSTEM

Recommended Ambient Air and Deck Temperatures

Ensure Deck is Free of Moisture and that the Surface Temp is at least 5° (F) above the Dew Point.

AMBIENT AIR TEMPERATURE (F)

DECK
TEMP
(F)

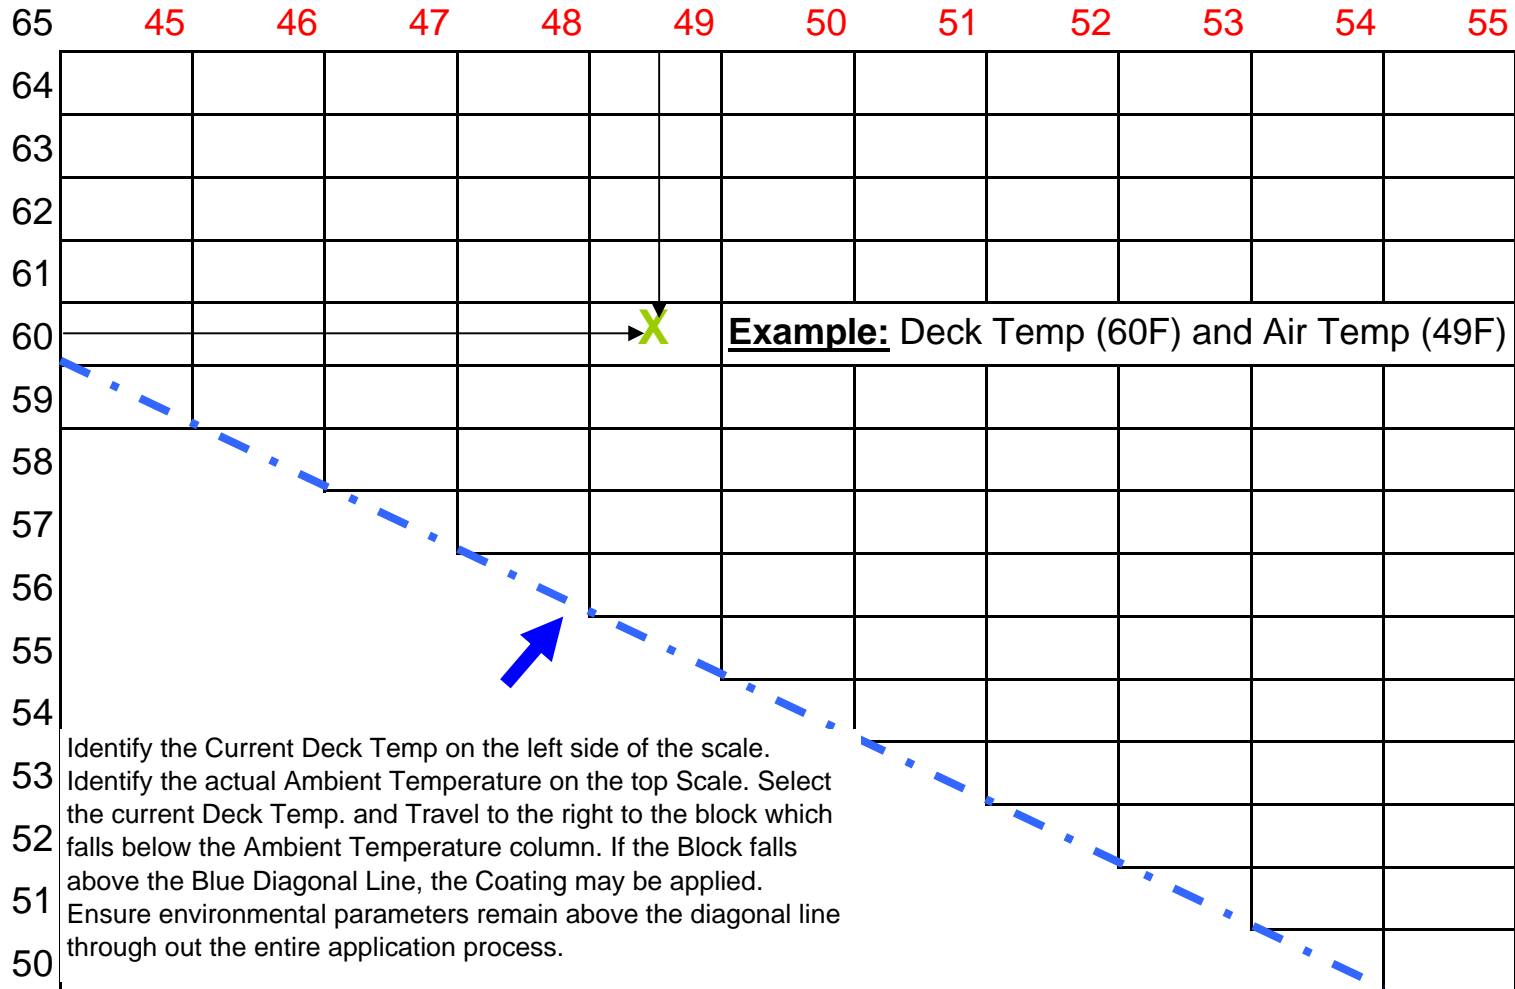

USE this "GO no GO" Chart ONLY when Ambient Air Temperature is less than 55 Degrees Fahrenheit !!

Application temperature information listed above is offered as a general guideline and does not supercede any specific requirements set forth in US

Navy documents such as Naval Ship's Technical Manual Chapter 634, 009-32 or other Navy specifications